



JML-S Adjustable Mini Lathe Stand




JET EQUIPMENT & TOOLS, INC.
A WMH Company
www.jettools.com

P.O. BOX 1349
Auburn, WA 98071-1349
e-mail jet@jettools.com

Phone: 253-351-6000
Fax: 1-800-274-6840
M-708354 07/01

Parts Breakdown

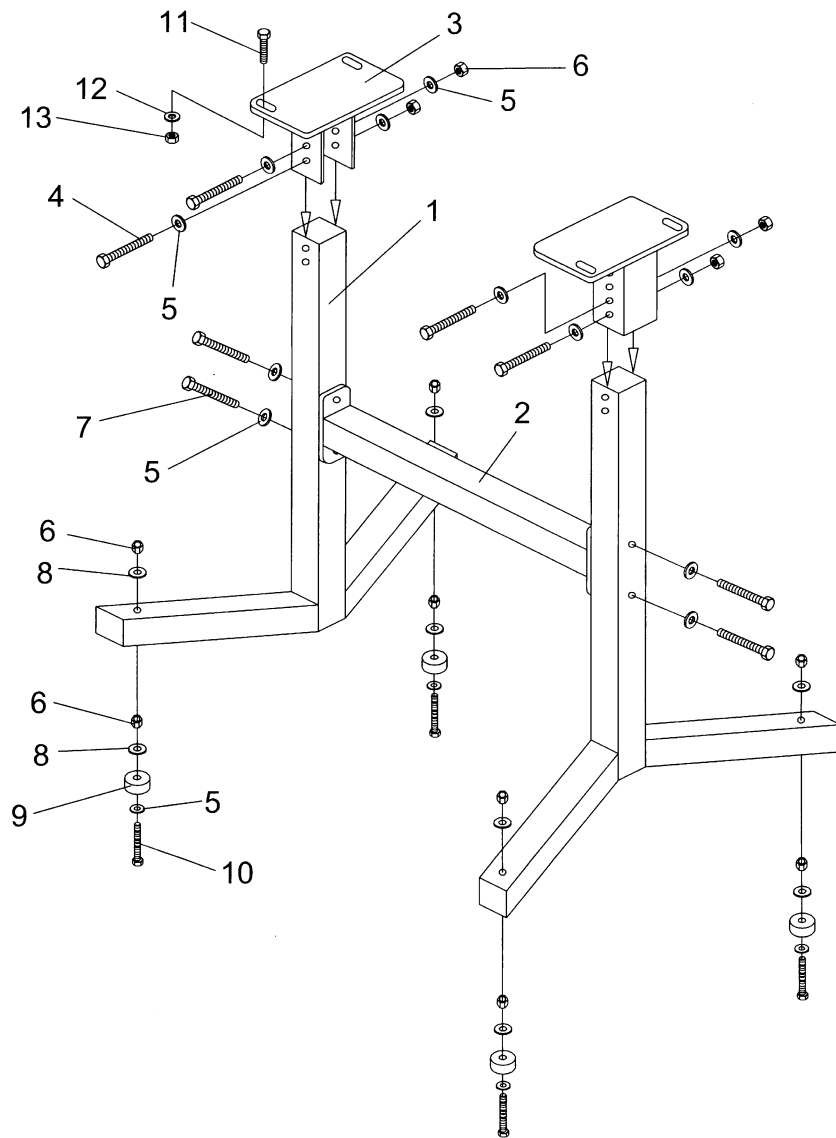

Parts List for JML-S Mini Lathe Stand

Index No.	Part No.	Description	Size	Quantity
1	JML-S01	Leg		2
2	JML-S02	Support		1
3	JML-S03	Bracket		2
4	TS-0060131	Hex Head Screw*	3/8 x 3	4
5	TS-0680041	Flat Washer*	3/8	16
6	TS-0561031	Hex Nut*	3/8	12
7	TS-0060111	Hex Head Screw*	3/8 x 2-1/2	4
8	TS-0680041	Flat Washer*	3/8	8
9	JML-S09	Leveling Pad*		4
10	TS-0060151	Hex Head Screw*	3/8 x 3-1/2	4
11	TS-0050061	Hex Head Screw*	1/4 x 1-1/4	4
12	TS-0680021	Flat Washer*	1/4	4
13	TS-0561011	Hex Nut*	1/4	4
	JML-SHK	Hardware Kit		1

* included in hardware kit